



Furby "Feet" Cleaning Guide

Let your Furby move again by cleaning its "feet".

Written By: Miles Drazkowski



INTRODUCTION

This guide doesn't require you to remove the back panel. The parts in the base are relatively small so we suggest having a way to keep track of them. Cleaning is at your discretion although we recommend a mild detergent/dish soap.



TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Furby "Feet" Cleaning Guide



 
- Flip Furby upside down so his feet are pointed towards you.
- Unscrew the right and left screws on the base.

Step 2




- Remove the base from your Furby.
- Flip over the base so the screws are on the right and left.
- Unscrew the 2 right and 2 left inside screws.

Step 3

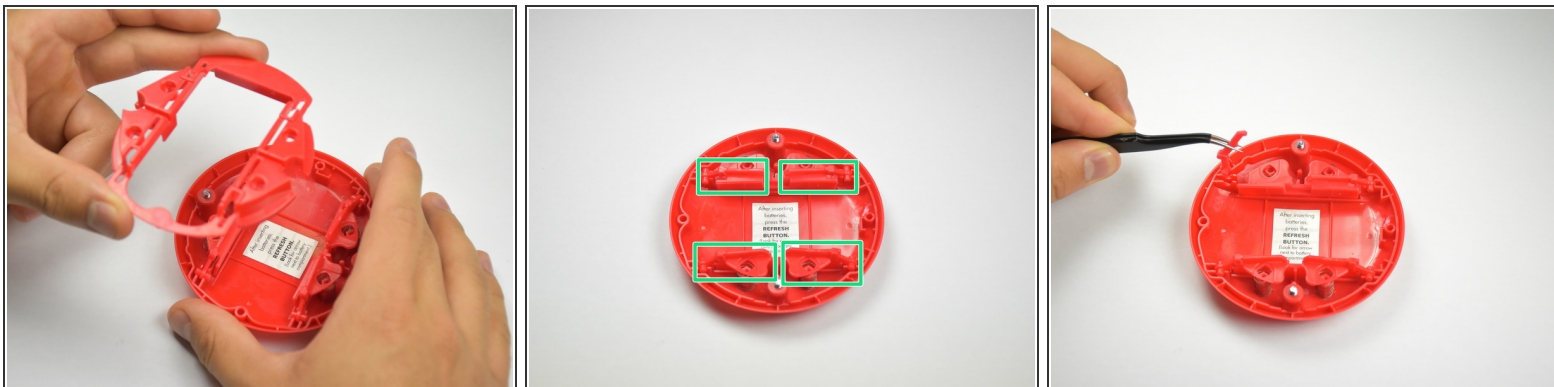

- Lift the housing for the foot components.
- Rotate the base 90 degrees.
- Locate all four of the foot activation levers. Remove them one by one from the base.

 Step 4

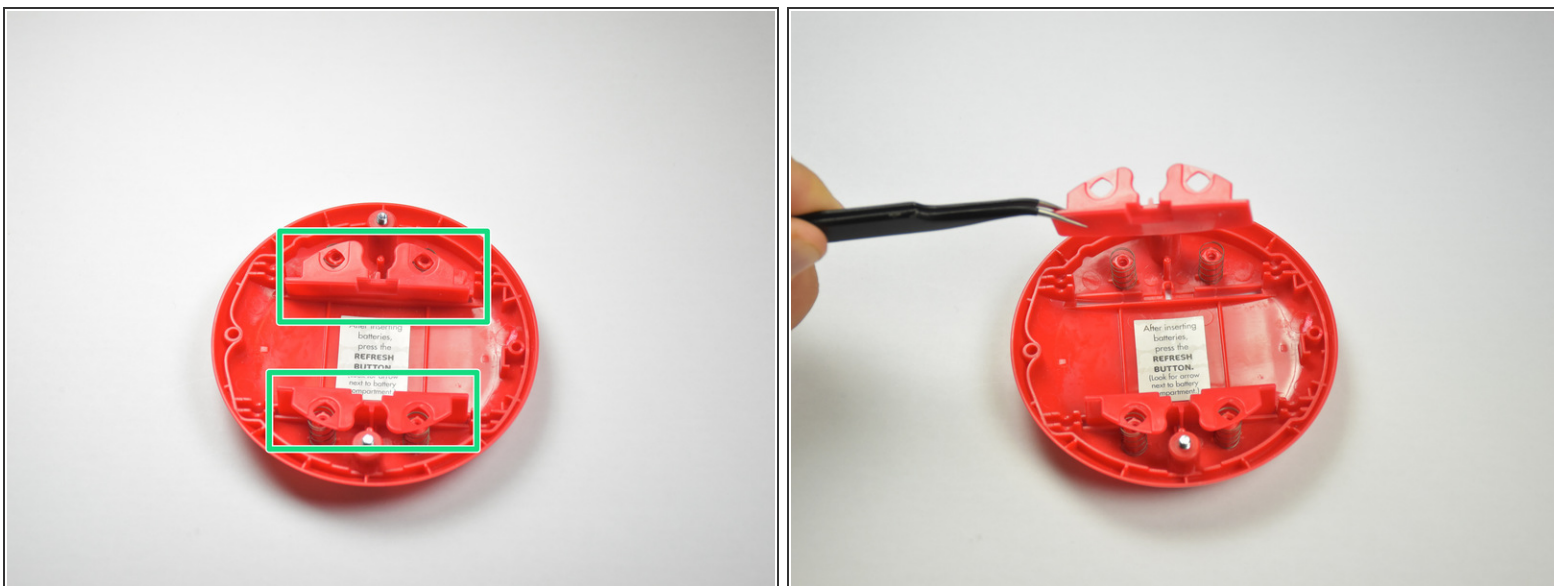

- Locate the feet pieces and remove them.

Step 5



- Locate and gently lift out the four small springs using tweezers.
- Now that you have all parts are removed, they can be cleaned and reassembled into Furby's "feet".

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-24 07:35:18 AM.